


Section

Section

Load Bearing & Lateral Conn D-1

Lateral Connection Conn D-2

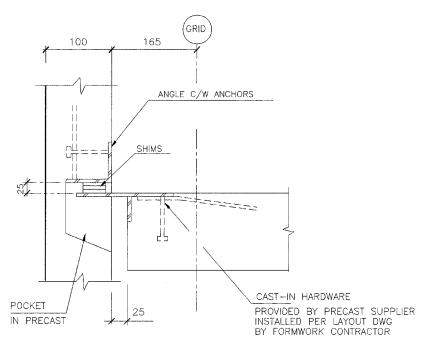

Section

(AT BALCONY)

Load Bearing Connection Conn D-5

